Light measuring circuit

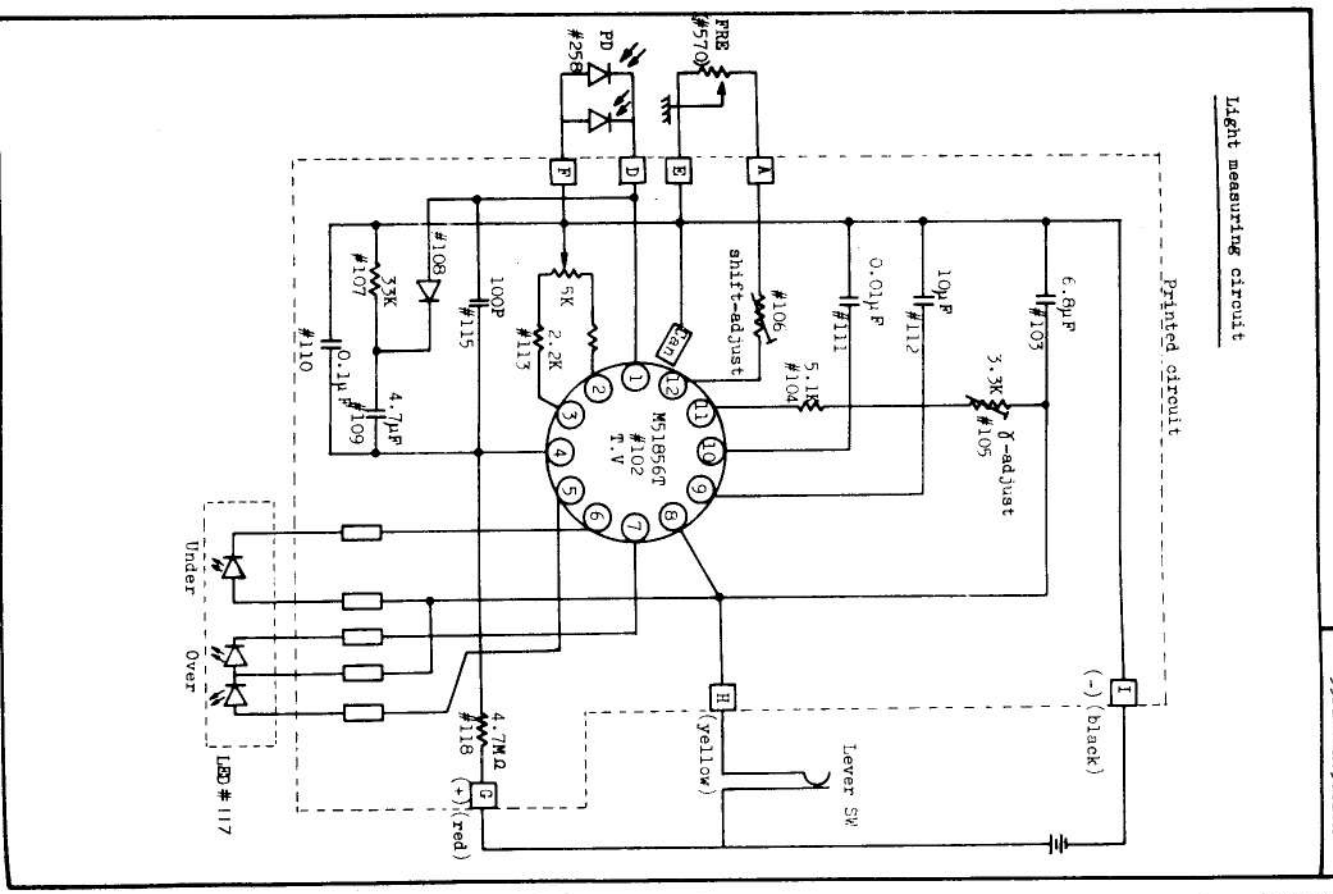

33FB - R.3001.A

Wiring diagram

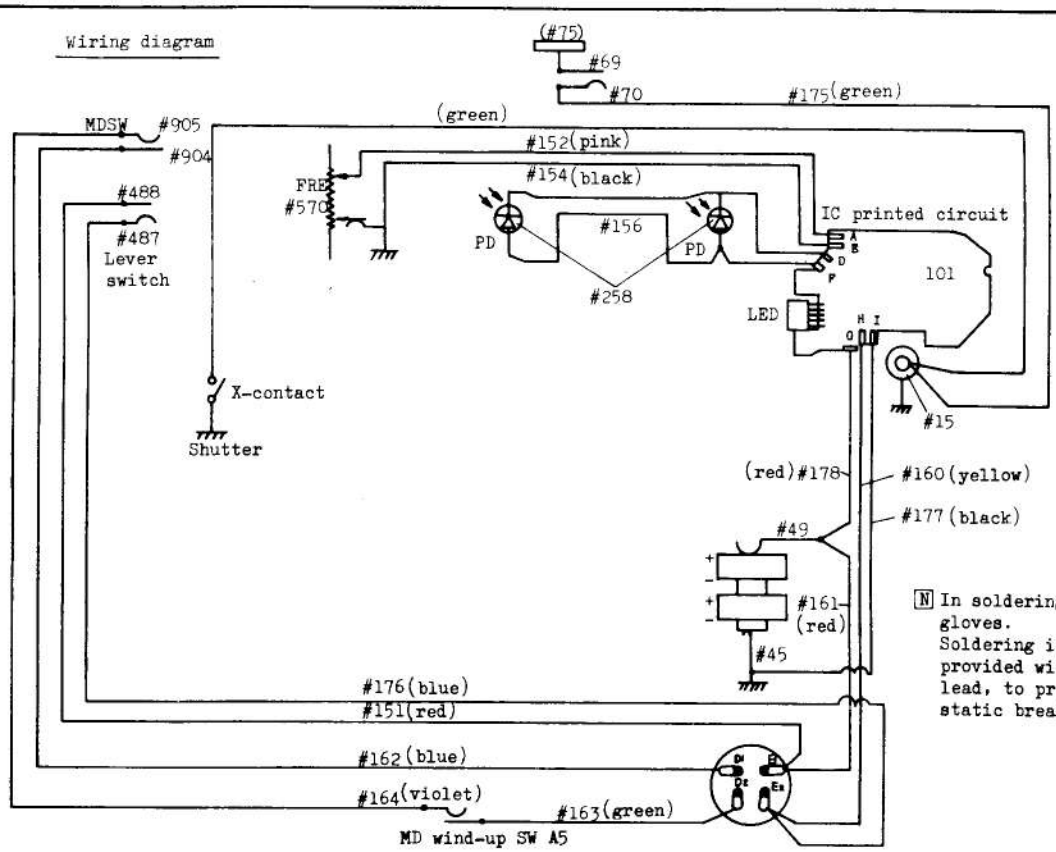

N In soldering, put on cotton gloves.
Soldering iron should be provided with a grounder lead, to prevent electro-static breakdown of IC.

33FB - R.3001.A